


F RELAY LOCATIONS

① : Engine Room R/B Assembly


○ : Engine Room J/B Assembly

Front Fender Apron LH (See Page 20)

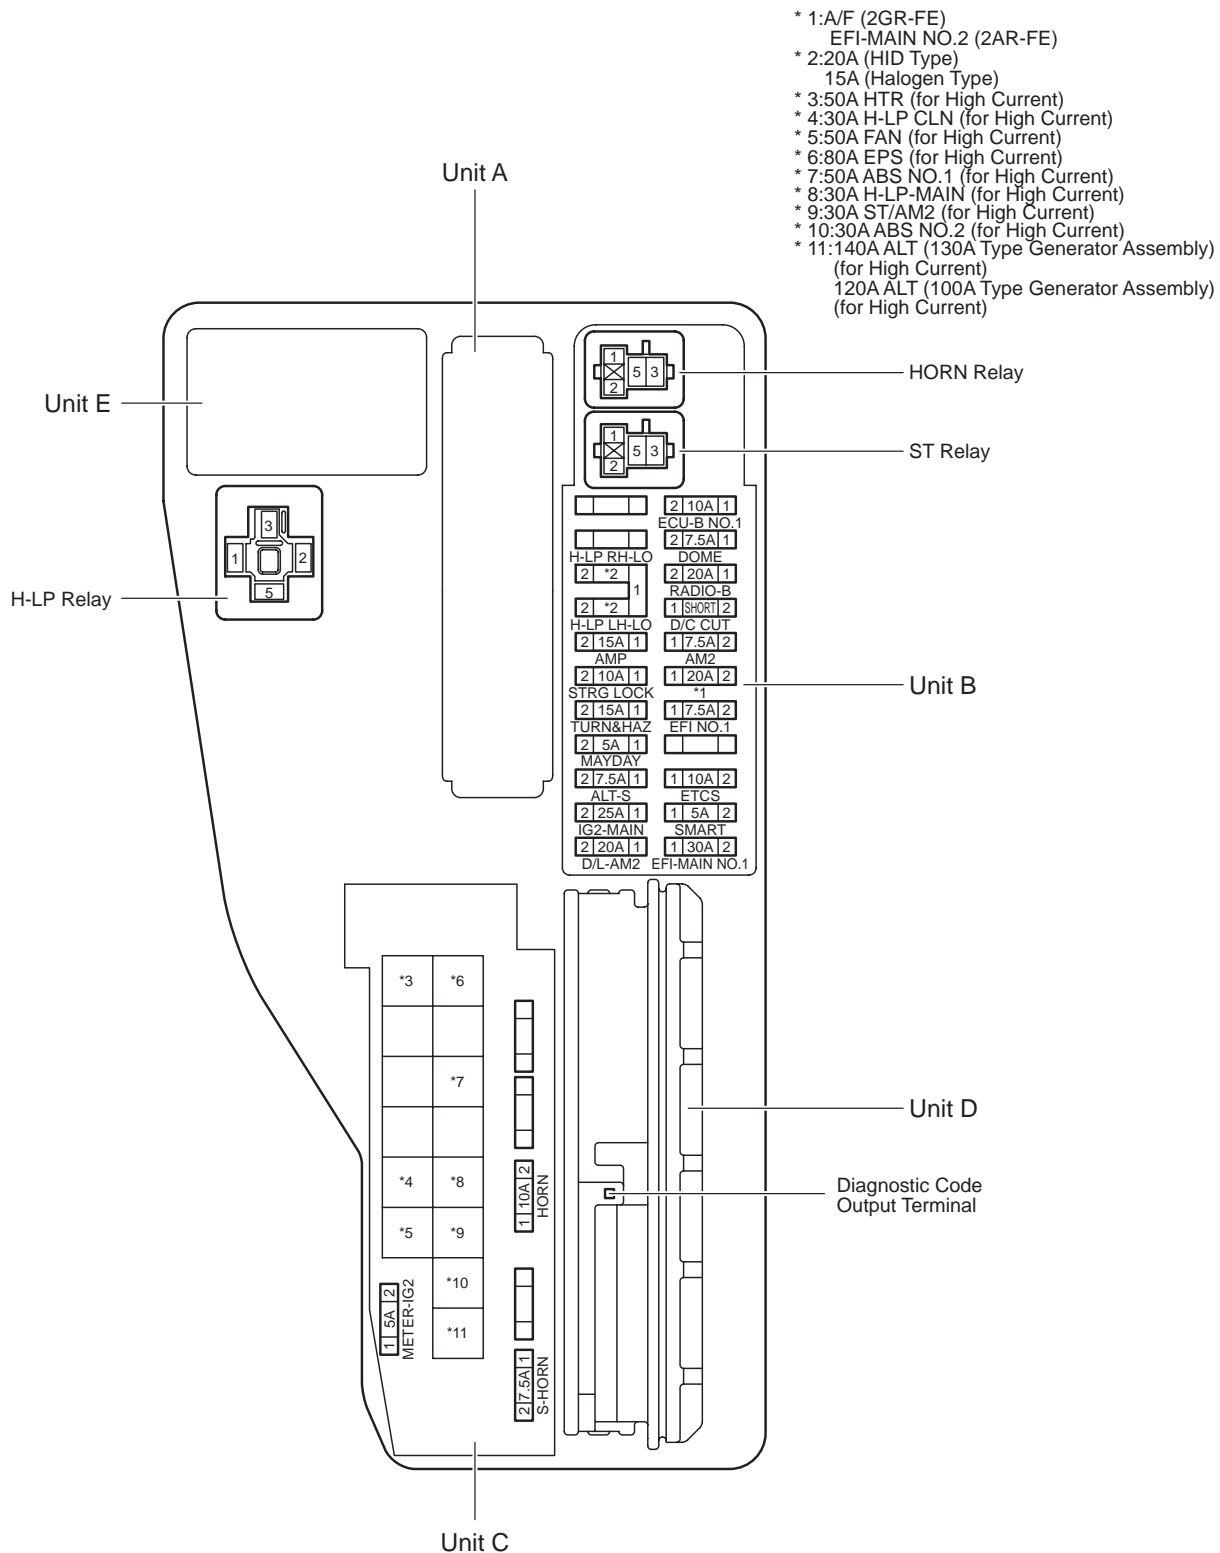

Unit A

* 1:10A (2GR-FE, 1AZ-FE)
7.5A (2AR-FE)

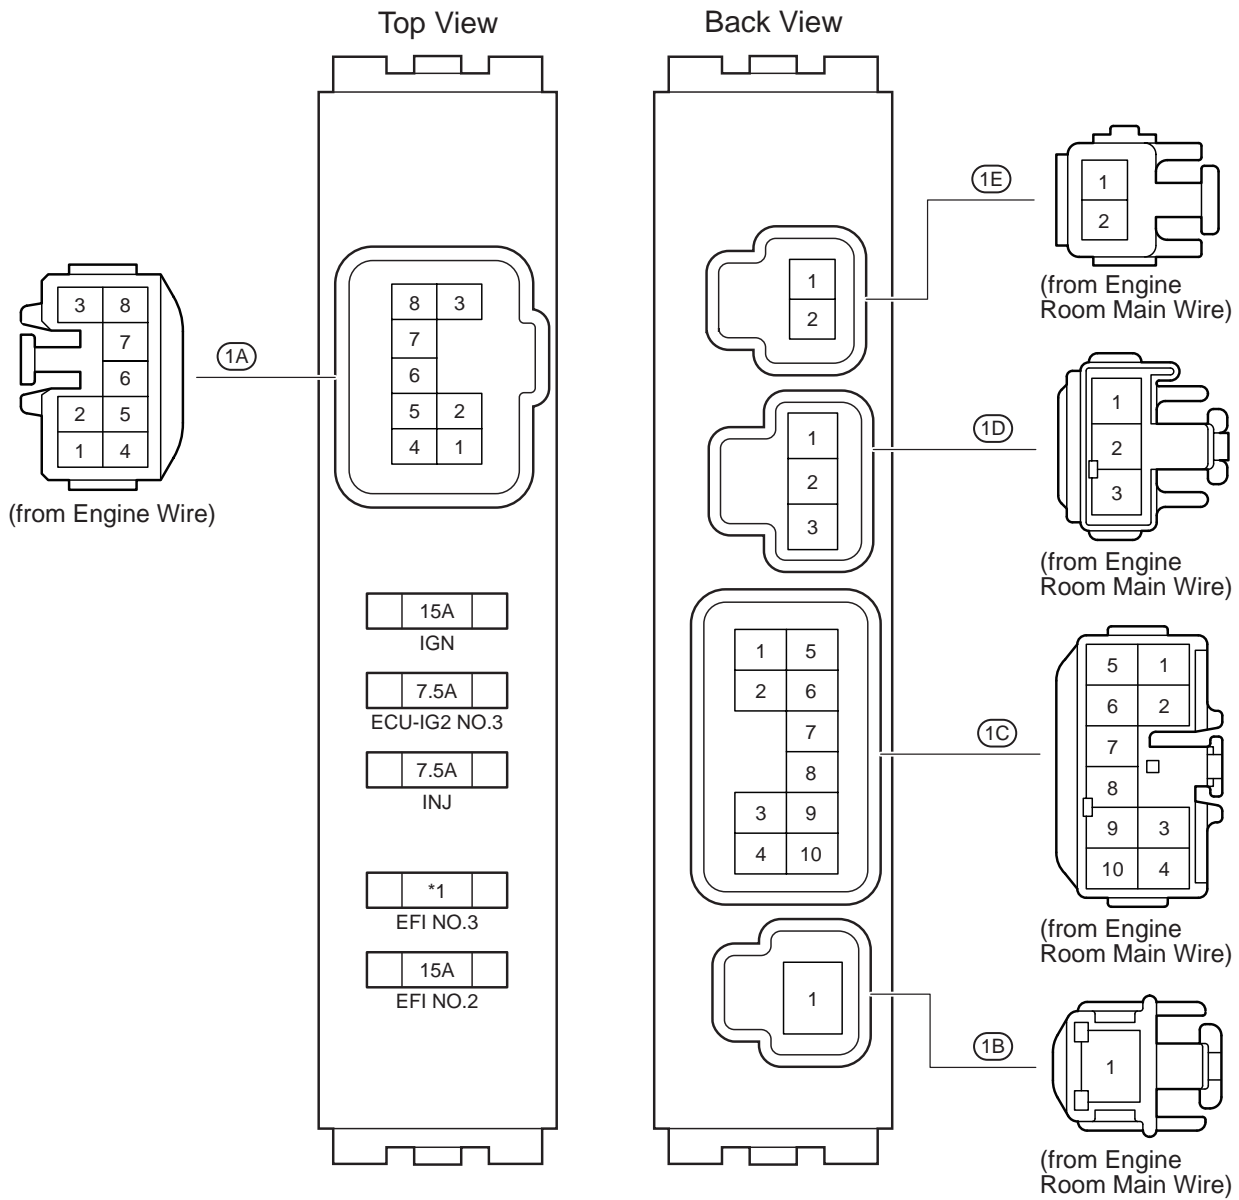


F RELAY LOCATIONS

①	: Engine Room R/B Assembly
○	: Engine Room J/B Assembly

Front Fender Apron LH (See Page 20)


Unit C

* 1:130A Type Generator Assembly
* 2:100A Type Generator Assembly

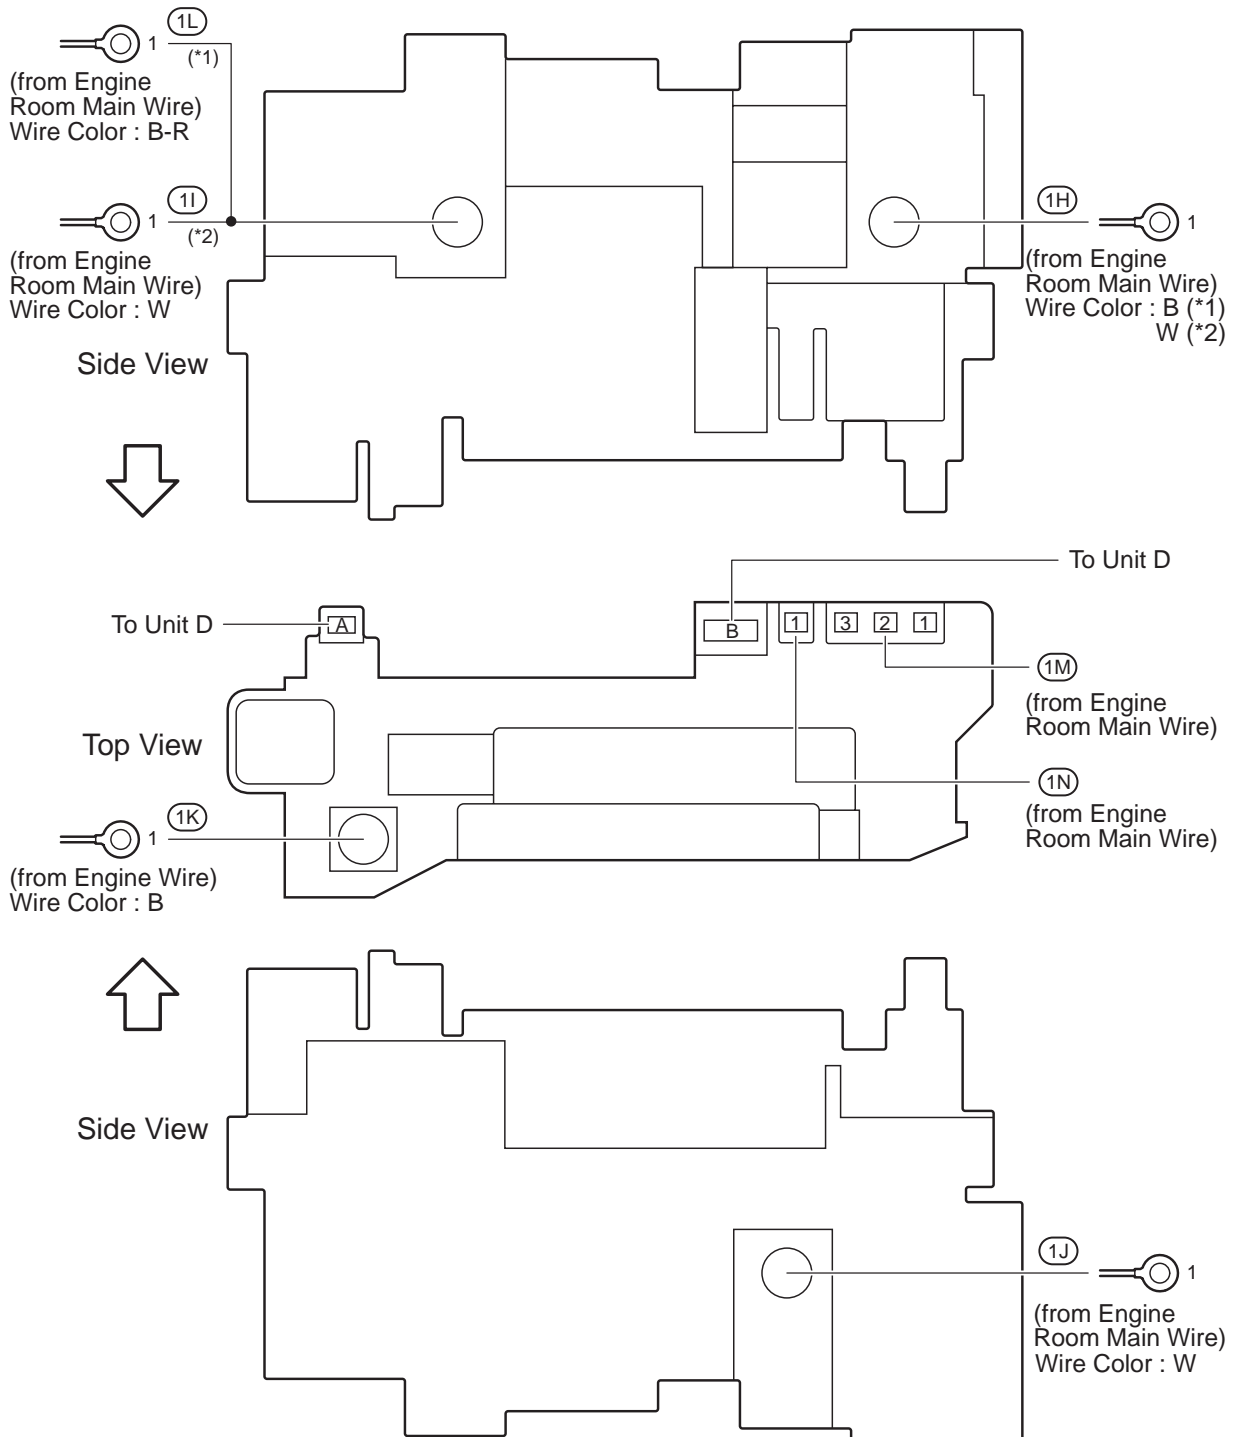

Unit D

Back View

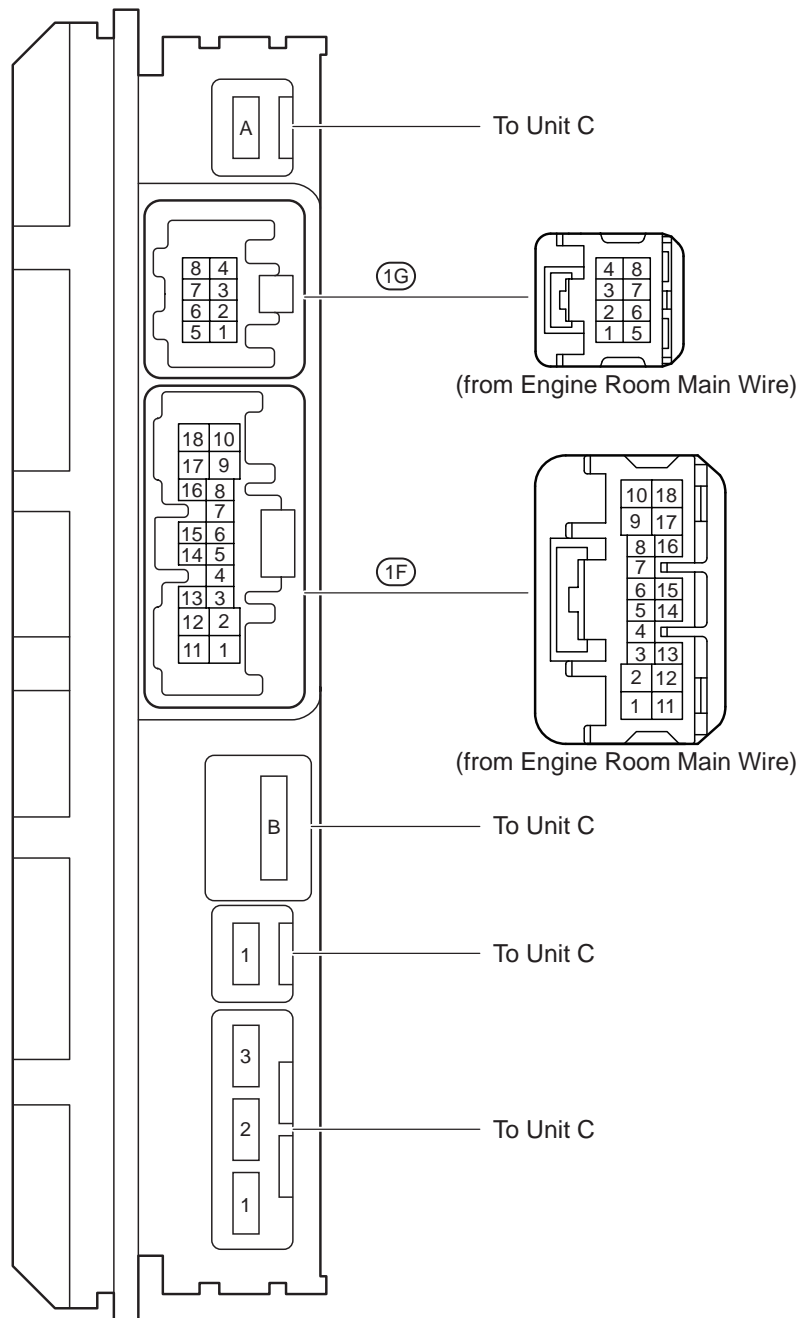

F RELAY LOCATIONS

① : Engine Room R/B Assembly
○ : Engine Room J/B Assembly

Front Fender Apron LH (See Page 20)

Unit E

