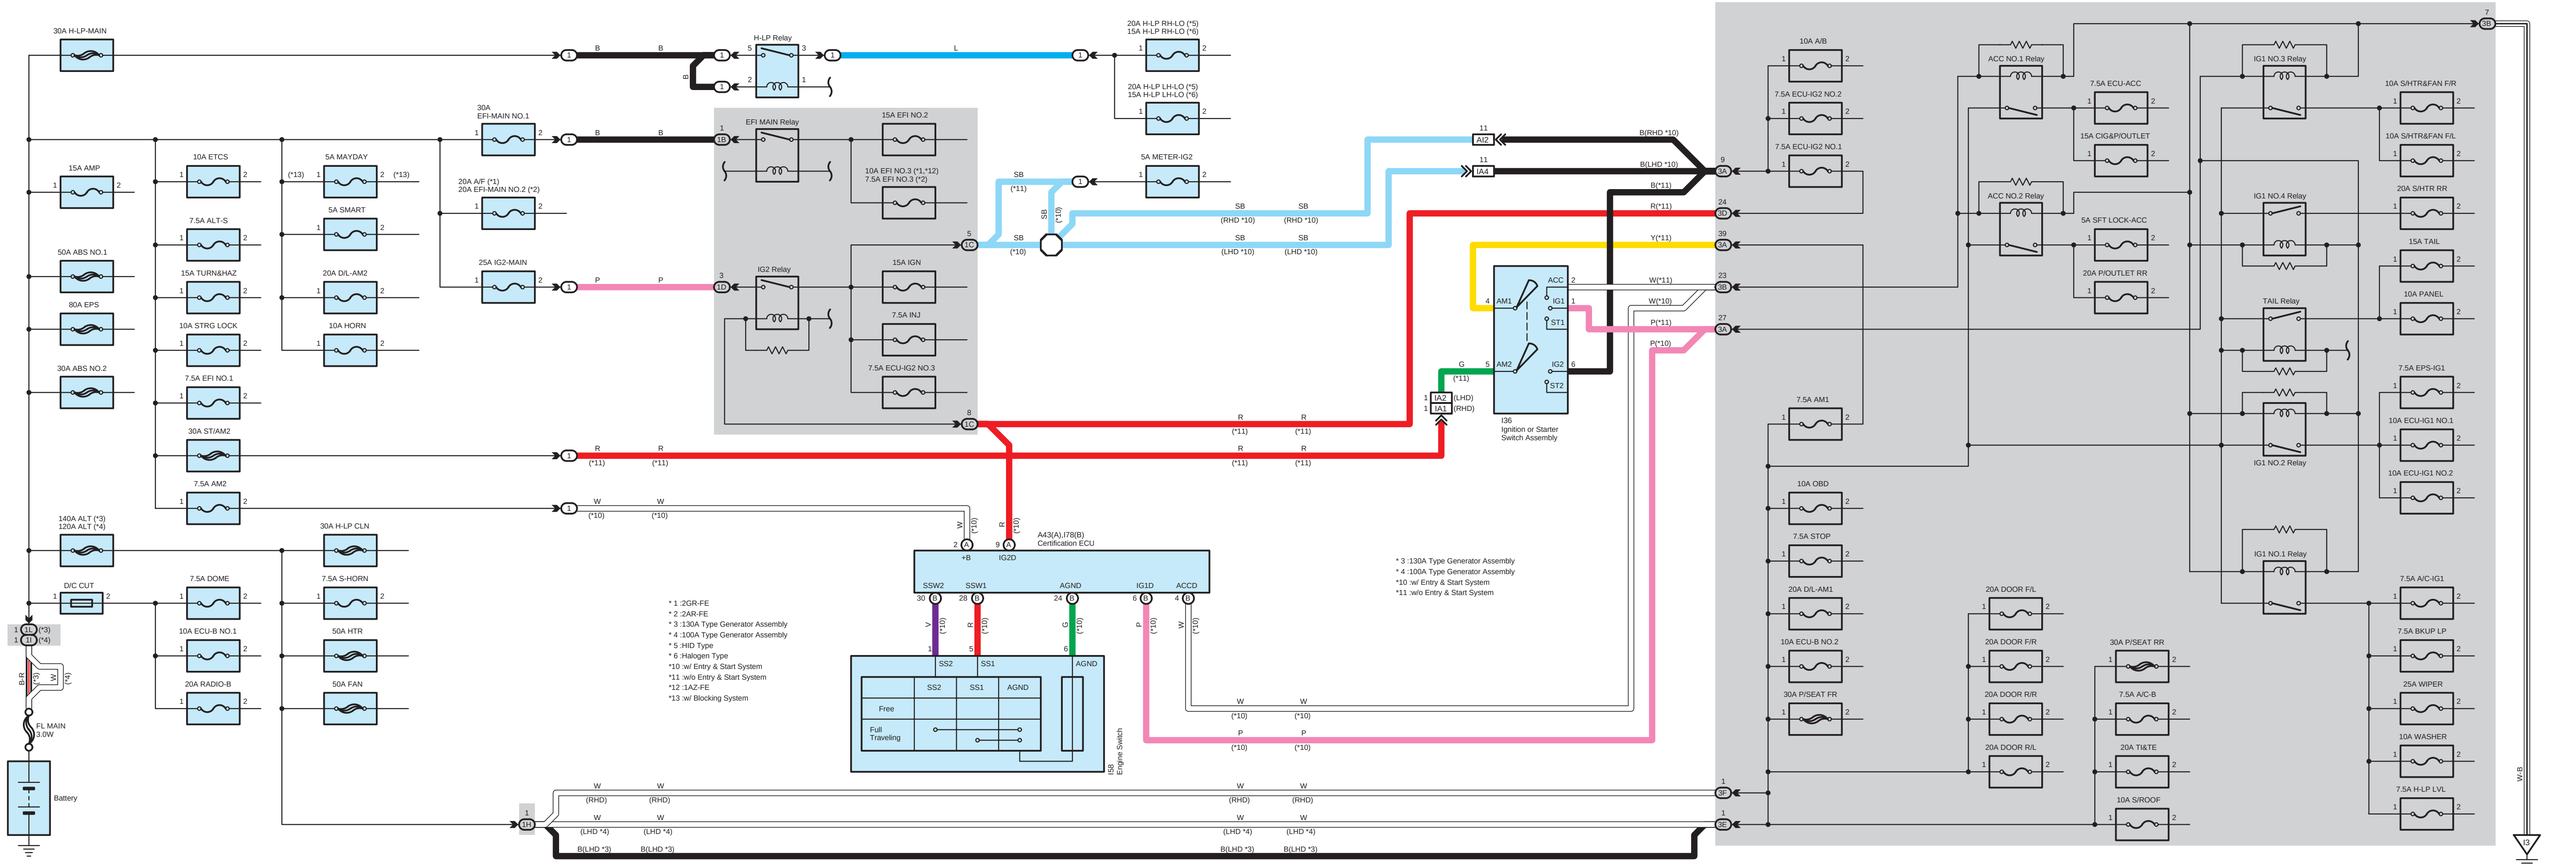
30A H-LP-MAIN
H-LP Relay
20A H-LP RH-LO (*5)
15A H-LP RH-LO (*6)
20A H-LP LH-LO (*5)
15A H-LP LH-LO (*6)
30A
EFI-MAIN NO.1
EFI MAIN Relay
15A EFI NO.2
10A EFI NO.3 (*1,*12)
7.5A EFI NO.3 (*2)
5A METER-IG2
15A AMP
10A ETCS
5A MAYDAY
20A A/F (*1)
20A EFI-MAIN NO.2 (*2)
25A IG2-MAIN
IG2 Relay
15A IGN
7.5A INJ
7.5A ECU-IG2 NO.3
50A ABS NO.1
7.5A ALT-S
5A SMART
80A EPS
15A TURN&HAZ
20A D/L-AM2
30A ABS NO.2
10A STRG LOCK
10A HORN
7.5A EFI NO.1
30A ST/AM2
7.5A AM2
140A ALT (*3)
120A ALT (*4)
30A H-LP CLN
D/C CUT
7.5A DOME
7.5A S-HORN
10A ECU-B NO.1
50A HTR
20A RADIO-B
50A FAN
FL MAIN
3.0W
Battery
A43(A),I78(B)
Certification ECU
+B
IG2D
SSW2
SSW1
AGND
IG1D
ACCD
SS2
SS1
Free
Full Traveling
E58
Engine Switch
I36
Ignition or Starter Switch Assembly
ACC
IG1
ST1
IG2
ST2
AM1
AM2
(LHD)
(RHD)
10A A/B
7.5A ECU-IG2 NO.2
7.5A ECU-IG2 NO.1
7.5A AM1
10A OBD
7.5A STOP
20A D/L-AM1
10A ECU-B NO.2
30A P/SEAT FR
ACC NO.1 Relay
7.5A ECU-ACC
15A CIG&P/OUTLET
ACC NO.2 Relay
5A SFT LOCK-ACC
20A P/OUTLET RR
20A DOOR F/L
20A DOOR F/R
20A DOOR R/R
20A DOOR R/L
30A P/SEAT RR
7.5A A/C-B
20A TI&TE
10A S/ROOF
IG1 NO.3 Relay
IG1 NO.4 Relay
TAIL Relay
IG1 NO.2 Relay
IG1 NO.1 Relay
10A S/HTR&FAN F/R
10A S/HTR&FAN F/L
20A S/HTR RR
15A TAIL
10A PANEL
7.5A EPS-IG1
10A ECU-IG1 NO.1
10A ECU-IG1 NO.2
7.5A A/C-IG1
7.5A BKUP LP
25A WIPER
10A WASHER
7.5A H-LP LVL
* 1 :2GR-FE
* 2 :2AR-FE
* 3 :130A Type Generator Assembly
* 4 :100A Type Generator Assembly
* 5 :HID Type
* 6 :Halogen Type
*10 :w/ Entry & Start System
*11 :w/o Entry & Start System
*12 :1AZ-FE
*13 :w/ Blocking System
* 3 :130A Type Generator Assembly
* 4 :100A Type Generator Assembly
*10 :w/ Entry & Start System
*11 :w/o Entry & Start System